





# **EARTH1006**

# Remote Monitoring Terminal

Earth1006 Remote Monitoring Terminal is a compact device with battery supply, ultra-low power consumption, IP68 protection, wireless communication and various sensor data collection function, in specific circumstance, multiple power supply options are available. It is suitable for the monitoring fields without power supply condition and the harsh environment. It could realize the multi-function including data collection, storage, alarming and transmission for underground water, firefighting water, dam water, water supply and drainage pipeline.

With a wide coverage of wireless network, the product could detect the real-time data of many monitoring sites in a wide range of areas like tap-water pipeline pressure, flow, underground water, agricultural irrigation, dam level, water monitoring, wind, rain, ambient temperature and humidity, air quality monitoring, water flow monitoring, image and firefighting pipeline monitoring, especially suitable for Underground Well detection application in a harsh environment.



- IP68 protection, dust-proof and waterproof;
- Multiple power supply options are available;
- Wireless transmission, no field wiring;
- Wide range measurement, pressure, temperature, level, flow, image, drain well cover etc.;
- Multi-channel, max. 8-way sensor parameters access:
- Remote setting for collection, transmission and image interval;
- Sensor available with upper and lower limit of threshold value and web real-time warning;
- PC and mobile terminal data application;
- Support customer self-built system and configuration application;
- Provide mounting accessories;
- Solution for underground well.













# SPECIFICATIONS

## Power

Power Supply	Non-Recyclable Battery	Rechargeable Battery	DC Power	AC Power/12VDC Adapter	Solar Power	
Battery Capacity	(See description on lable /Nameplate)	20Ah/12V	12VDC	110V~240V AC 50/60Hz	20 Ah/12V Solar Panel: 12V/20W	
Battery Lifetime	3~5 years (Related to transmission frequency)	Longer than 1 month(Related to transmission frequency)	\	\	More than 1 month (Related to Transmission frequency)	
Feed	100mA/14.4V DC	100mA /12VDC	100mA /12V DC	100mA /12V DC	100mA /12V DC	
Power Consumption	Sleep Current ≤30uA/14.4V Transmission Average Current ≤50mA/14.4V					

# Interface Parameters

Interface	Al	DI/PI	RS485	Camera		
Count	3	2	1	1		
Signal	0V~5V DC/ 4mA~20mA DC	Switch/Pulse	ModBus RTU	For taking pictures only, video transmission not available		
Notes	Collection accuracy ±0.5%FS	Low level 0~1VDC High level 5~12VDC Pulse Frequency≤10Hz	Max.3-ch sensor parametric analysis, It's also used in parameter settings	RS485		
Hints	Available with max. 8-channel sensor input; Max. 4 physical interfaces; Default interfaces:1×RS485,1×AI; If more than 4 interfaces are required, the extra connection boxes would be necessary.					

Page 2/6



## SPECIFICATIONS

#### **Data Transmission**

Communication Mode		Standard/Band	Transmission Distance		
2G		GSM 850/900/1800/1900MHz	Global Bands		
	NB-IoT	B1/B3/B8/B5/B20/B28	Global Bands		
	China	TDD-LTE B38/B39/B40/B41 FDD-LTE B1/B3/B8 TD-SCDMA B34/B39 WCDMA B1 CDMA 1X/EVDO BCO GSM/GPRS/EDGE B3/B8			
EMEA/ Korea/ Multi- Thailand/ Bands India		FDD-LTE B1/B3/B5/B7/B8/B20 WCDMA B1/B5/B8 GSM/GPRS/EDGE B3/B8	Global Bands		
	North America	FDD-LTE B2/B4/B12 WCMDA B2/B5			
	South America/ Australia/ New Zealand/ Taiwan  FDD-LTE B1/B2/B3/B4/B5/B7/B8/B28 WCDMA B1/B2/B5/B8 GSM/GPRS/EDGE B2/B3/B5/B8  FDD-LTE B1/B3/B8/B18/B19/B26				
LoRa		433/470/868(Europe)/915MHz (United States)	≤5km (According to site environment)		

- · Wake-up mode: magnetic activation/ timing/ alarm wake-up
- Collection interval: 1, 5, 10, 30, 60, 360, 720, 1440 minutes optional; Alarms will be given at the interval, and maximum 3 times warning can be sent in one interval to ensure longer battery life.
- Transmission interval: 1, 5, 10, 30, 60, 360, 720, 1440 minutes optional
- Image interval: 30, 60, 720, 1440 minutes optional
- · Upload information: sensor data, battery information, network status, self check information

### Data Storage

 Local storage, Flash 4 MB (more than 200,000 history storage space)

#### Configuration

Configuration mode: local/remote

### **Environmental Conditions**

· Operation temp.: -20°C ~70°C

• Storage temp.: -40 °C  $\sim 85$  °C

### Display

· Segment LCD with backlight



#### Other Specifications

- Protection: IP68( can work normally for 72 hours at 1m below the water)
- · Housing: PA6+30% GF
- · Installation method: hoop and wall mounting
- Outline dimension: 147×262.5×105.5mm
- Weight: about 2.3kg
- Accessories: fixed support×1, magnetic bar×1, M5 bolt×1, φ8mm expansion bolt×3, φ200mm hoop×2



## SYSTEM TOPOLOGY



Above sensors can be used together with Earth 1006. It supports up to 8-way sensors input and the sensors can be selected according to customer's needs. And other sensors are also available.

# OUTLINE CONSTRUCTION (Unit: mm)



### INSTALLATION METHOD





Earth1006 Remote Monitoring Terminal uses hoop and wall-mounting method which are easy for installation and convenient for maintenance and we also provide installation accessories.



### UNDERGROUND WELL APPLICATIONS










## SOLAR POWER APPLICATION



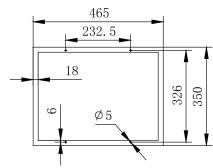

Solar Panel Power	Solar Panel Dimension	Solar Panel Material	Pole Dimension	Mounting bracket&Pole
12V/20W	465×350×17mm	Monocrystal silicon	Suggested DN100 pole, about 3 meters high	The customer could design and prepare

Notes: Customers can purchase the solar panels by themselves referring to the above specifications.

A pair of cable connectors can be provided by us.

### NOTES

- 1. The factory default interface is 1\*RS485, 1\*Al. If you need more interfaces, please note in the order.
- 2. For the number of AI, AU interfaces, x+y=3, namely, the maximum interface number of the analog input is 3, and the AI interface is an independent interface, which cannot be extended by the junction box;
- 3. The maximum number of openings at the bottom of the housing is 4. When the total number of RS485, AI/AU, DI/PI, and Ca interfaces is more than 4, you need to purchase an external junction box. For details, please refer to the MST091 waterproof junction box. Please note in the order;
- 4. For products with RS485 interface, customers need to provide the Protocol;
- 5. If Lora version is needed, please note the area of application. There is no need to install SIM card, but need to be used matching with an Earth1004;
- 6. For sensor and specification selection, please refer to the corresponding datasheet;
- 7. There is only 1pc of BD9 configuration line packaged along with each order. If extra lines are required, please note in the order;
- 8. If User need to configure products, please purchase the USB to RS485 serial cable separately (Z-TEK Lite ZE628 suggested). There is only 1pc of USB to RS485 serial cable packaged along with each order;
- 9. Any special requirement, please contact us and note in the order.



## ORDER GUIDE

Earth1006					Re	emo	te Moni	toring Tei	rminal
	Code	Commi	Communication mode						
	G2	2G	2G						
	GC	Multi-E	Multi-Bands in China						
	GE	Multi-E	Multi-Bands in EMEA/Korea/Thailand/India						
	GA	Multi-E	Multi-Bands in North America						
	GS	Multi-E	Bands in S	South An	nerica	/Aus	tralia/N	ew Zealan	d/Taiwan
	GN	NB-IoT	-						
	L	LoRa	[433/470	/868 (E	urope	) / 9	15 (USA)	MHz]	
		Code	Antenn	a type					
		A <sub>1</sub>	Integra	ted ante	nna(S	ugge	sted)		
		A <sub>2</sub>	Externa	al suction	antei	nna(/	Antenna	length 3m	)
			Code	Power	supply	/			
			В	Non-re	cyclab	le ba	attery (Si	uggested)	
			С				tery (12\	//20Ah)	
			D	DC Pov	•		<u> </u>		
			E						~240V AC 50/60Hz)
			A					0V AC 50/	· · · · · · · · · · · · · · · · · · ·
			S		1			ers purcha	ese by themselves )
				Code Interface Types					
				R4					o 3 channels (1-ch as Default)
				xAI x means any number among 1~3, represents 1~3 ch 4~20mA input (1-ch as default)			ong 1~3, represents 1~3 ch 4~20mA		
				yAU			any nur default		ng 3-x, represents 1~3ch 0~5V input
				zDI			any nu ch as de		tween 1~2, represents 1~2 ch DI/PI
				Ca	1*Ca	mera	a, only su	pport MS	T071 Camera (0-ch as default)
					Cod	le	Softwa	re service l	уре
					М		Micro s	ensor big (	data platform
					С		Custom	er self-bui	ilt platform
							Code	SIM card	
							S <sub>1</sub>		al IoT network card (available for users only )
							S <sub>2</sub>	Self-own	ed SIM card
								Code	USB to RS485 Serial cable
								U <sub>1</sub>	Recommended and need to be purchased separately
								U <sub>2</sub>	User-supplied, and Z-TEK Lite ZE628 suggested
Earth1006	G1	A <sub>1</sub>	В	R4 <sub>1</sub> AI	M		S1	U <sub>1</sub>	The whole spec.

Page 6/6